PORTABLE SHELTER INSTRUCTIONS

MODEL: SH-9M-600

W6 xL12x H 1.9 m





TURE MAY NOT REFLECT THE EXACT MODEL

TO OUR NEW AND VALUED CUSTOMER

Thank you for purchasing your new Instant Shelter . We knowyou will have as much pleasure owning your new shelter as we had in makingit for you. Our shelters have been designed for rapid assembly and minimalmaintenance. We have rigorous quality control at every step of the sheltersmanufacturing process to insure you the best unit money can buy. Our partsare triple checked prior to packaging to insure you will have everything youneed before you start. In the unlikely event that a part is damaged or missing, you should immediately contact your place of purchase for a speedyreplacement.

Qingdao Shenghe

And Now a Few Words About Safety

HEAD PROTECTION IS RECOMMENDED!

Working with or under heavy parts included with this shelter can causeserious head injury.

WEAR GLOVES

You will be working with metal parts which may have SHARP edges

CHECK WITH YOUR LOCAL AUTHORITIES

Underground POWER CABLES or GAS LINES may result in injury whilesecuring the shelter. It may also result in having to move the building. Acursory check with the local building authorities will help alleviate theseconcerns.

CLIMBING EQUIPMENT

It is highly recommended that scaffolding, ladders and mechanicallifting equipment conform to all local building codes when erecting theshelter. Safety straps and harnesses should be used at all times. Themetal structure of the shelter has not been designed for human weight. Erecting shelter during wind or rain is unsafe and could result in seriousinjury.

CHECK LOCAL WEATHER CONDITIONS

Check your local weather forecast prior to planning your building day. Wind, snow and/or rain may cause unsafe conditions that could lead toserious injury.

STORING HAZARDOUS MATERIALS

Check all local building codes prior to storing any hazardous material. Shelter may require additional ventilation to meet local codes.

SEVERE WEATHER CONDITIONS

Working in and around the portable shelter during severe weather is notrecommended. Serious injury could result. In the event that extraordinarily severe wind, snow or other severe conditions are predicted and if time permits, it is recommended that the shelter coverbe removed.

PREVENT ENTRAPMENT

Check Shelter for co workers before locking up. Always provide forescape in case of emergency.

SHELTER RELOCATION

Should the shelter require relocation or disassembly for any reason, it isstrongly recommended that the structure and its cover are thoroughlyinspected prior to rebuilding

PERIODIC SHELTER INSPECTION

As with all structures, periodic inspection of the cover and all structuralcomponents is highly recommended. Tightening the cover and thestructure will prolong the life of your investment

PLEASE BE SafetyCONSCIOUS!

Common Sense is the knack of seeing things as they are, and doing things as theyought to be done. Harriet Beecher Stowe


THANK YOU FOR CHOOSING OUR SHELTER

UNPACKING & IDENTIFYING PARTS

Prior to assembling your New Portable Shelter, unpack all crates and complete an inventory of all parts according to the following list and diagrams


PARTS LIST FOR SH-9M-600

Parts#	Descriptions	Diagram	Dimensions (in mm)	Q' TY
1	Curved Tube (side crest)	000000000000000000000000000000000000000	Ф 45х1600	18
2	Roof Rafter	[o]	Ф 45х1550	18
3	Top crest(Peak)	0 0	Ф45х1750	9
4	Purlin		Ф 38х1443	32
5	Purlin		Ф38х1443	8
6	bracing cable		Φ6x4100	32
7	Base Rail Parts		25x50x1570	2
8	Base Rail Parts		25x50x1490	12
9	Base Rail Parts		25x50x1490	2
10	Angle iron(to fix base rail on container)		120x90x59x4	16
11	Tube connector			10
12	Ratchet Tie-Down(end)			4
13	Ratchet Tie-Down			16
14	Screws, washer and Nuts	()————————————————————————————————————	M8x70	166
15	Screws, (Ratchet Tie-Down)	()===0 (®	M8x15	32
16	Screws, washer and Nuts		M12x100	32
17	Cover Conduit		Ф25х1530	2
18	Cover Conduit with swaged end		Ф 25х1530	14
19	Strap band(for ratchet)		25x700	16
20	Cover lock -up ratchet		T-2	20
21	Roof Cover			1

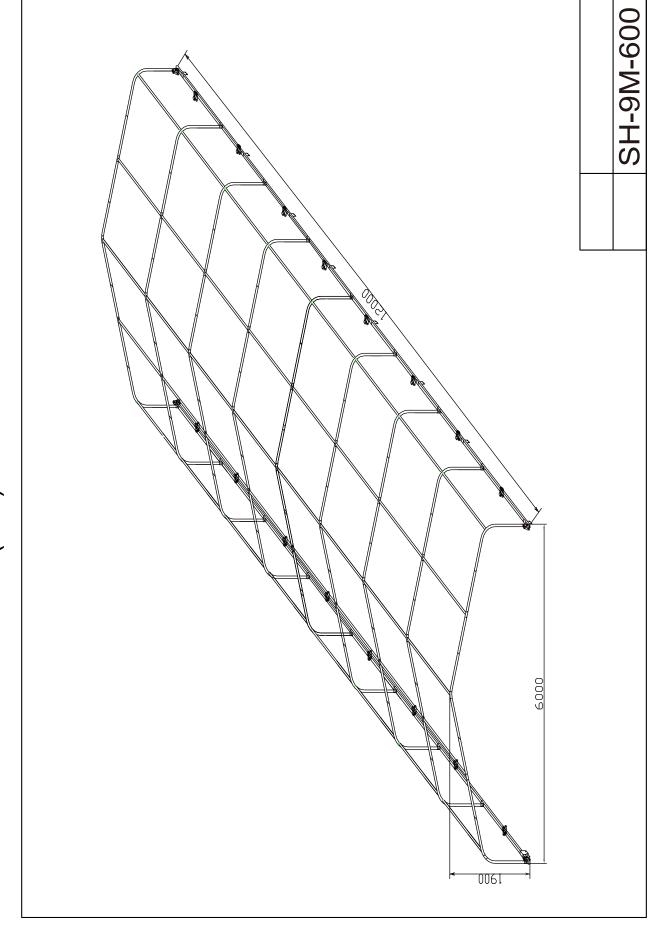


SH-9M-600 Main Dimension(mm)


SH-9M-600 L12x W6 x H1.9m FRAME DIAGRAME

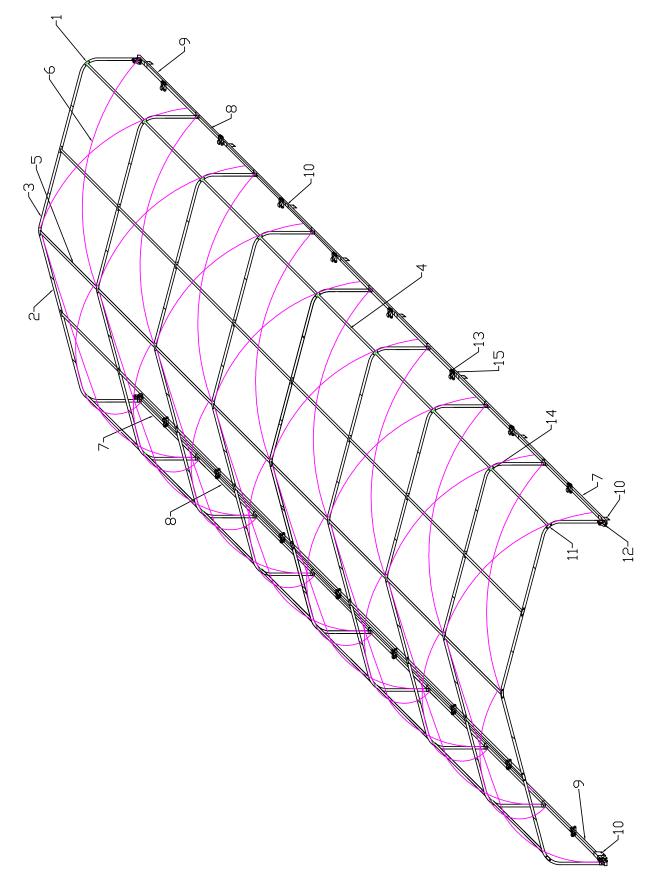


Step A: Place the base rail parts on a chosen place as shown below, and connect the parts.

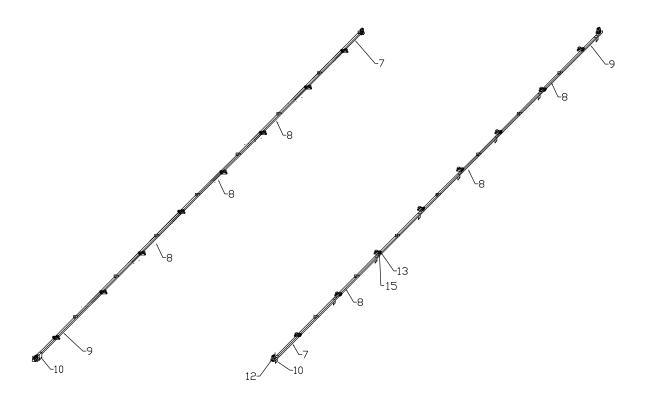


Step B: Connect the top crest(3),rafter(2) and curved tube of side rafter(1),and insert into the base rail. See below.

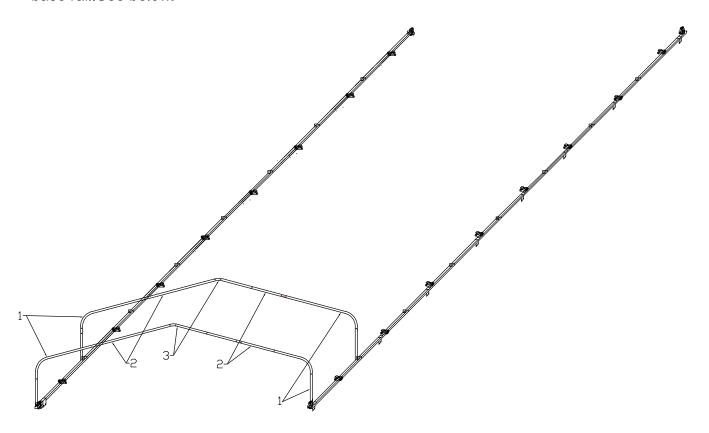


Step C: Install the purlin(4)or(5) as shown below. (use the screws and nuts where necessary)

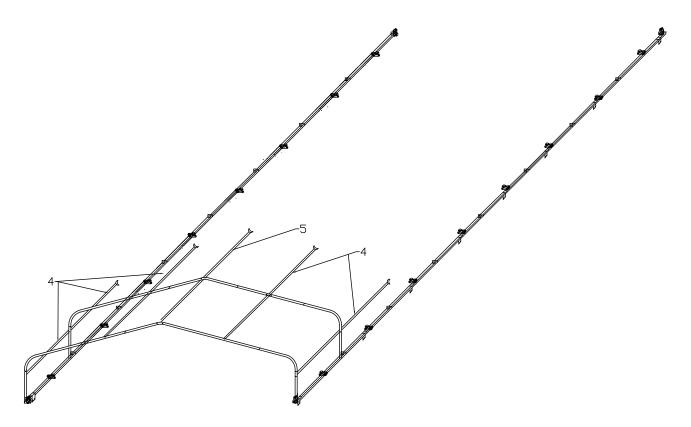


Step D: Do the same step B and C to the other rows

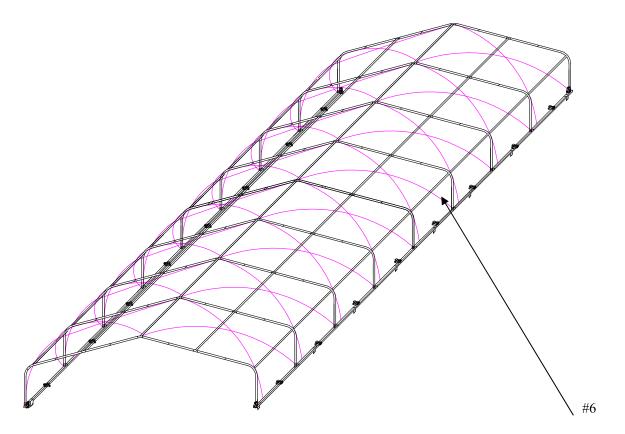


StepE:Put on the roof cover (21) as shown below.

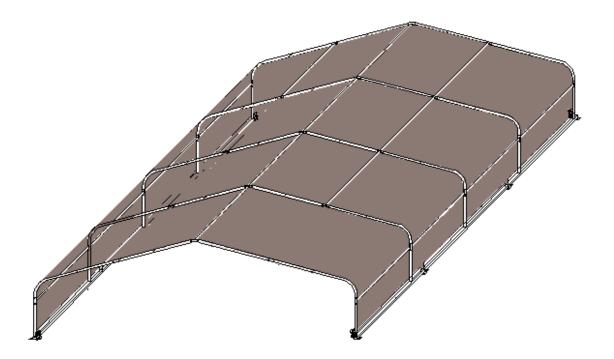

TIPS: Slide the roof cover over assembled frame from one side and insert the conduit to pocket on side:

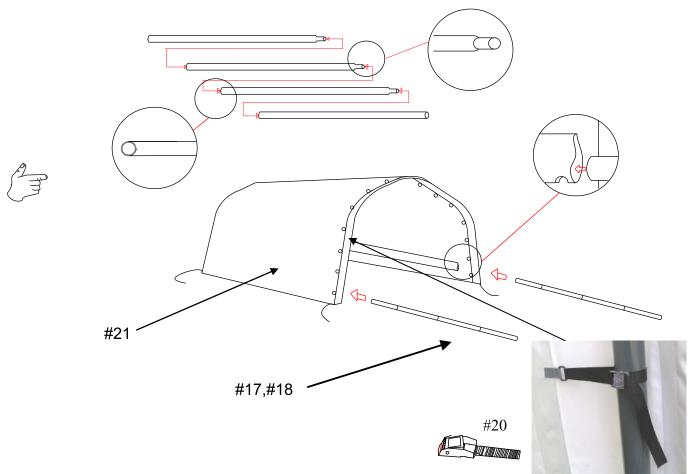

Pocket for side wall conduit

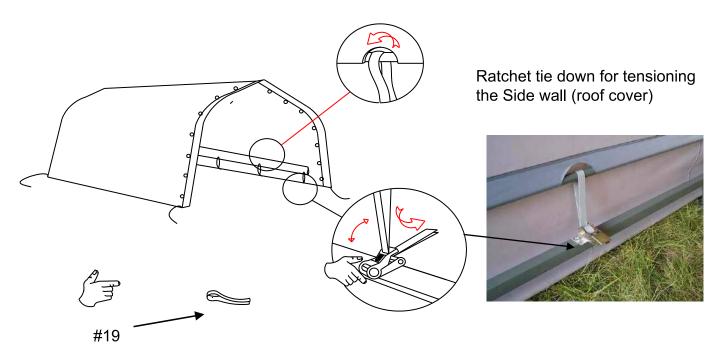

Step E: Fix the container shelter to container top edge with angle iron and screws.

